

STOP!

**Do not install until you have read these instructions
Call 800.465.6909 with any questions**

HANDLING AND INSTALLATION INSTRUCTIONS

Stitched™ Vertical

(MR-SV, SBV, SGV, SOV, and SPV series)

See supplemental instructions on page three for trimming instructions.

Rolls are graded for optimal installation. Start installing with Roll #1.

QUICK FACTS

- Paste: Maya Romanoff's MR-RA-888-1 or MR-RA-888-5 or a good quality clear, strippable, pre-mixed, vinyl adhesive.
- Table-trim.
- Walls should be mirror-smooth.
- Prepaste the wall at seams.
- Relax 2-4 minutes.
- Please read the following installation instructions before proceeding.
- **IF YOU DO NOT FOLLOW OUR INSTALLATION INSTRUCTIONS, MAYA ROMANOFF WILL NOT ACCEPT RESPONSIBILITY FOR THE INSTALLATION—YOU WILL BE INSTALLING AT YOUR OWN RISK.**

GENERAL GUIDELINES

- **Rolls are graded for optimal installation. Start installing with Roll #1.**
- Inspect goods carefully. No returns on cut goods. Grade carefully for color flow.
- Confirm that you have the correct color and product before installing. Additional yardage from this dye lot may not be available.
- **No allowances will be made after THREE (3) drops—Call 800.465.6909 immediately if you encounter any difficulties.**
- No claims allowed for labor charges or consequential damages under any conditions.
- Wallcoverings can display certain irregularities that are inherent to the manufacturing process.
- Walls should be mirror-smooth. Lining paper should be used if walls have imperfections.
- **NO SIDE MATCH IN HORIZONTAL STRIAE. VERTICAL STITCH PATTERN DOES HAVE A REPEAT, SEE PAGE 3.**

ACTIONS TO AVOID

- Do not rub face of the product with a stiff brush.
- Do not crease wallcovering.
- Do not pull panels once they have been placed on the wall: this will cause the seams to open after the product dries.
- Do not use a seam roller to set the seams. Instead, use a plastic sweep.
- Avoid soaking the paper in water or getting the wallcovering excessively wet. This can cause shrinkage and opening of seams as the wallcovering dries.
- Avoid direct or bright reflected sunlight. Not guaranteed against fading or color change.

05/01/11

CONTINUED



MAYA ROMANOFF®

Chicago Headquarters: 3435 Madison, Skokie, IL 60076 t 1.773.465.6909 f 1.773.465.7089 www.mayaromanoff.com

1

STOP!

**Do not install until you have read these instructions
Call 800.465.6909 with any questions**

HANDLING AND INSTALLATION INSTRUCTIONS

Stitched™ Vertical

(MR-SV, SBV, SGV, SOV, and SPV series)

See supplemental instructions on page three for trimming instructions.

Rolls are graded for optimal installation. Start installing with Roll #1.

WALL PREPARATION

- Paint the wall the color of the product with a good quality, non-sealing flat latex wallpaint. Avoid super sealing wall prep products. They can cause product to bubble.
- Do not install on sealed walls without hanging lining paper.
- Walls must be completely dry before installation can begin.

TRIMMING

- Trim with a very sharp, single edge razor blade to true. **USE A NEW BLADE FOR EACH CUT.**
- Trim the product on a table.
- See Trimming Instructions on Page 3.

ADHESIVE

- Use Maya Romanoff's MR-RA-888-1 or MR-RA-888-5 or a good quality CLEAR, STRIPPABLE, PRE-MIXED, VINYL adhesive*.
- Put adhesive on the wall at the seam lines. This will help the seams set firmly.
- Low water content is very important to trouble-free installations. In cases of super-saturated color, the color may bleed. **THIS IS NORMAL AND WILL NOT AFFECT THE FINAL INSTALLATION.**

HANGING

- Adhere product to the wall using a soft bristled nylon brush.
- Gently smooth product to the wall using a plastic smoother. Smooth continuously to remove any bubbles.
- Go back and ensure all bubbles are smoothed out before leaving. Any bubbles left upon completion of install will be permanent.
- Paper may lift around stitched lines. Use a soft, clean rag to smooth stitched lines firmly to the wall.

RELAXING TIME

- It is essential to allow wallcoverings sufficient relaxing time to avoid bubbling, shrinking and seam opening. Allow the paste enough time to soak into a sheet before hanging.
- Usual relaxing time: 2-4 minutes
- Do a small test strip to determine the proper relaxing time.
- **WIPE OFF EXCESS PASTE IMMEDIATELY WITH A SOFT DAMP CLOTH. DO NOT SCRUB. DO NOT RUB.**

*For more information on Maya Romanoff's MR-RA-888-1 or MR-RA-888-5, check out www.mayaromanoff.com.

05/01/11

CONTINUED



MAYA ROMANOFF®

Chicago Headquarters: 3435 Madison, Skokie, IL 60076 t 1.773.465.6909 f 1.773.465.7089 www.mayaromanoff.com

STOP!

**Do not install until you have read these instructions
Call 800.465.6909 with any questions**

HANDLING AND INSTALLATION INSTRUCTIONS

Stitched™ Vertical

(MR-SV, SBV, SGV, SOV, and SPV series)


See supplemental instructions on page three for trimming instructions.

Rolls are graded for optimal installation. Start installing with Roll #1.


SUPPLEMENTAL TRIMMING INSTRUCTIONS

- Please see general installation instructions on pages 1-2.
- Trim edges with a very sharp razor blade to true.

**Measure 1/4" from LEFT edge and trim.
Measure 3/4" from RIGHT edge and trim.**

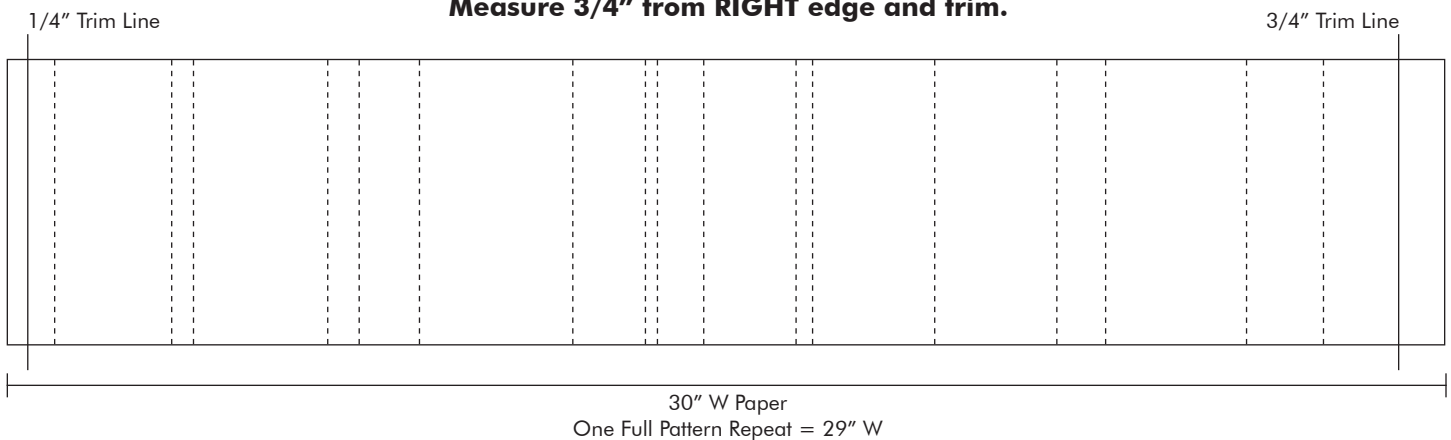

**After installing two drops, check to make sure that
there is 1-1/2" from stitch line to stitch line across seam.**

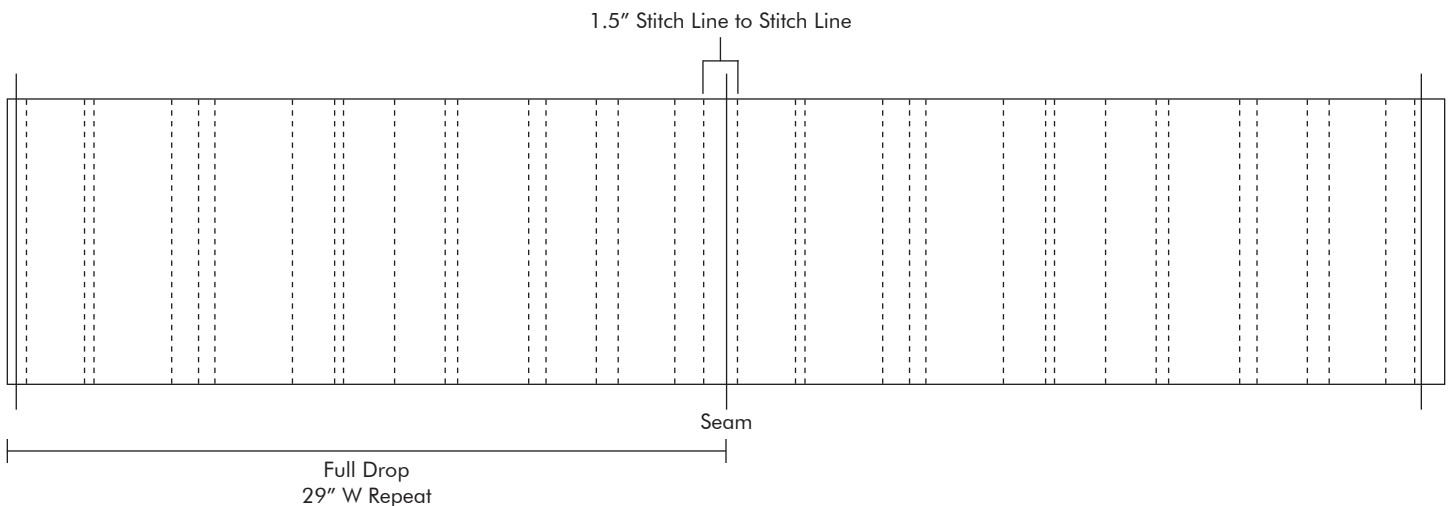

Two Full Drops Shown

05/01/11



MAYA ROMANOFF®

Chicago Headquarters: 3435 Madison, Skokie, IL 60076 † 1.773.465.6909 ‡ 1.773.465.7089 www.mayaromanoff.com